

Controllers, Indicators, and Recorders

Controllers

Page 1 of 2

Product	Date	Doc. Num	Title or Description
37	0403	PSS 3-4A2 A	Product Specification Sheet - Diaphragm Measuring Element
40	0702	PL 001-105	Parts List - Box Pens, Pen-Arms, Indexes for Instruments
40	0702	PL 001-345	Parts List - Indicating Scale and Light Assemblies for Instruments
40M	0702	PL 001-105	Parts List - Box Pens, Pen-Arms, Indexes for Instruments
40M	0702	PL 001-345	Parts List - Indicating Scale and Light Assemblies for Instruments
40M	0402	PSS 3-1A1 A	Product Specification Sheet
40P	0702	PL 001-105	Parts List - Box Pens, Pen-Arms, Indexes for Instruments
40P	0702	PL 001-345	Parts List - Indicating Scale and Light Assemblies for Instruments
40P	0403	PSS 3-1A2 A	Product Specification Sheet - Pressure Recorders, Indicators, and Recording or Indicating Controllers
40P	0201	PSS 3-1A2 B	Product Specification Sheet - Temperature Recorders, Indicators, and Recording or Indicating Controllers
40P	0403	PSS 3-1A2 C	Product Specification Sheet - Flow Recorders, Indicators, and Controllers
43AP	0286	DP 011-476	Dimensional Print
43AP	0180	MI 011-476	Installation and Operation
43AP	0486	MI 011-477	Servicing
43AP	0486	MI 011-481	Maintenance and Alignment
43AP	0403	PL 004-484	Parts List
43AP	0403	PSS 3-1B3 A	Product Specification Sheet- Pneumatic Indicating Controllers
43AP	0101	PSS 3-1B3 B	Product Specification Sheet - Controllers for Electronic Inputs
43APG	0403	PL 004-494	Parts List
130	0603	PL 004-560	Parts List - Automatic Control Section for Controllers
130M	0382	DP 017-450	Dimensional Print
130M	0578	MI 017-450	Installation and Maintenance
130M	0179	PL 004-550	Parts List
130M	0495	PSS 2B-4H1 A	Product Specification Sheet
138	0101	PSS 2B-4H1 M	Product Specification Sheet
716C	1196	DP 018-575	Dimensional Print
716C	0297	MI 018-575	1/6 DIN Temperature
716C	0597	MI 018-579	1/16 DIN and 1/8 DIN Temperature Serial Communications Guide
716C	1196	PSS 2C-1B5 A	Product Specification Sheet
718P	1196	DP 018-574	Dimensional Print
718P	0297	MI 018-574	1/8 DIN Temperature with Series Interface
718P	0597	MI 018-578	1/8 DIN Process Serial Communications Guide
718P	1196	PSS 2C-1B4 A	Product Specification Sheet
718TC	1196	DP 018-572	Dimensional Print
718TC	0297	MI 018-573	1/8 DIN Temperature with mA Output
718TC	0597	MI 018-579	1/16 DIN and 1/8 DIN Temperature Serial Communications Guide
718TC	1196	PSS 2C-1B3 A	Product Specification Sheet
731C	0700	MI 018-876	Digital Process, Serial Communications

September 2004

Controllers, Indicators, and Recorders

Controllers

Page 2 of 2

Product	Date	Doc. Num	Title or Description
740C	0503	PL 009-166	Parts List
740C	0701	PSS 2C-1A7 A	Product Specification Sheet
762	0398	MI 018-888	Serial Communications Guide
762	0895	TI 039-200	Technical Information
762C	0696	PSS 2C-1A1 D	Product Specification Sheet
762CNA	1094	DP 018-836	Dimensional Print
762CNA	0298	MI 018-885	SINGLE STATION MICRO
762CNA	0499	PL 009-136	Parts List
762CSA	0298	MI 018-889	Shelf Mounted
762CSA	0499	PL 009-139	Parts List

September 2004

Controllers, Indicators, and Recorders Indicators

Product	Date	Doc. Num	Title or Description
45P	0501	PSS 2B-1H1 E	Product Specification Sheet
65FS	0185	MI 018-272	Field Mounted
65FS	0784	PL 008-559	Parts List
65P	0101	PSS 2A-3B1 A	Product Specification Sheet
710D	1196	DP 018-571	Dimensional Print
710D	0297	MI 018-571	1/8 DIN Digital
710D	0597	MI 018-576	Digital Serial Communications Guide
710D	1196	PSS 2C-1B2 A	Product Specification Sheet

September 2004

Controllers, Indicators, and Recorders Recorders

Product	Date	Doc. Num	Title or Description
120	0603	PL 006-413	Parts List - Style D
120	0603	PL 006-414	Parts List - Style E
120	0101	PSS 2B-3E1 A	Product Specification Sheet
740R	0503	PL 009-166	Parts List
740R	0901	PSS 2C-1A8 A	Product Specification Sheet
752RNA	0402	PSS 2C-1A16 A	Product Specification Sheet
763MNA	0901	PL 009-178	Parts List
763MNA	0402	PSS 2C-1A15 A	Product Specification Sheet
763RNA	0901	PL 009-178	Parts List
763RNA	0402	PSS 2C-1A14 A	Product Specification Sheet
763RSA	0799	MI 018-893	Strip Chart Recorder Supplemental Instructions for 202S and EH Series Shelf Mounting
763RSA	0901	PL 009-180	Parts List
763RSA	0402	PSS 2C-1A14 B	Product Specification Sheet
E20S	0701	PSS 2A-3A1 C	Product Specification Sheet

Electrochemical Analyzers

Page 1 of 2

Product	Date	Doc. Num	Title or Description
BS811BV	0804	MI 611-207	Conversion Kit to Add HART Capability to 875 Series Analyzers
BS811FN	0804	MI 611-228	General Purpose Firmware Upgrade Kit for 875 Analyzers
BS811GC	1002	MI 611-189	Static Charge Control Upgrade for 875PH Analyzers
BS811GD	1002	MI 611-189	Static Charge Control Upgrade for 873PH-..P Analyzers
BS811GE	1002	MI 611-189	Static Charge Control Upgrade for 873PH-..W, X, Y, or Z Analyzers
873	0201	MI 611-206	Intrinsic Safety Connector Diagrams and Nonincendive Circuits
873A	1003	PSS 6-1C1 F	Product Specification Sheet
873ACC	0604	MI 611-192	Ace Series Analyzers for Contacting Conductivity Measurement
873AEC	0604	MI 611-193	Ace Series Analyzers for Electrodeless Conductivity Measurement
873APH	0604	MI 611-191	Ace Series Analyzers for pH Measurements
873ARS	0604	MI 611-194	Ace Series Analyzers for Resistivity Measurements
873CC	1295	DP 611-162	Dimensional Print
873CC	0604	MI 611-166	Contact/Conductivity Measurement
873CC	1295	PL 611-016	Parts List
873CC	1003	PSS 6-1C1 E	Product Specification Sheet
873DO	1195	DP 611-149	Dimensional Print
873DO	1295	DP 611-162	Dimensional Print
873DO	0604	MI 611-169	Dissolved Oxygen Measurement
873DO	1295	PL 611-016	Parts List
873DO	1003	PSS 6-1C1 E	Product Specification Sheet
873DPX	1295	DP 611-162	Dimensional Print
873DPX	0604	MI 611-190	pH/ORP/ISE Measurement
873DPX	1295	PL 611-016	Parts List
873DPX	0594	PSS 6-1C1 B	Product Specification Sheet
873DPX	1003	PSS 6-1C1 E	Product Specification Sheet
873EC	1295	DP 611-162	Dimensional Print
873EC	0204	MI 611-167	Electrodeless Conductivity Measurement
873EC	1295	PL 611-016	Parts List
873EC	1003	PSS 6-1C1 E	Product Specification Sheet
873PH	1295	DP 611-162	Dimensional Print
873PH	0604	MI 611-165	pH and ORP Measurement
873PH	1295	PL 611-016	Parts List
873PH	0594	PSS 6-1C1 B	Product Specification Sheet
873PH	1003	PSS 6-1C1 E	Product Specification Sheet
873RS	1295	DP 611-162	Dimensional Print
873RS	0604	MI 611-168	Resistivity Measurement
873RS	1295	PL 611-016	Parts List
873RS	1003	PSS 6-1C1 E	Product Specification Sheet

Electrochemical Analyzers

Page 2 of 2

Product	Date	Doc. Num	Title or Description
875	0804	MI 611-207	Conversion Kit BS811BV to Add HART Communication Capability
875	0104	MI 611-208	Safety Information
875	0301	MI 611-226	Remote Communications Program
875	0603	MI 611-227	Operation, Configuration and Calibration Using a HART Communicator
875	0804	MI 611-228	General Purpose Firmware Upgrade Kit BS811FN
875CR	0500	DP 611-164	Dimensional Print
875CR	0303	MI 611-222	Contacting Conductivity and Resistivity Measurements
875CR	1200	PL 611-158	Parts List
875CR	0604	PL 611-163	Parts List - Style C
875CR	0500	PSS 6-3A1 B	Product Specification Sheet
875EC	0500	DP 611-164	Dimensional Print
875EC	0303	MI 611-224	Electrodeless Conductivity Measurement
875EC	0303	MI 611-220	System Calibration Examples
875EC	1200	PL 611-158	Parts List
875EC	0604	PL 611-163	Parts List - Style C
875EC	0500	PSS 6-3N1 C	Product Specification Sheet
875PH	0500	DP 611-164	Dimensional Print
875PH	0303	MI 611-225	pH, ORP, or Ion Selective Electrode (ISE) Measurement
875PH	1200	PL 611-158	Parts List
875PH	0604	PL 611-163	Parts List - Style B
875PH	0500	PSS 6-1A1 E	Product Specification Sheet

September 2004

Electrochemical Transmitters

Product	Date	Doc. Num	Title or Description
870IT	0201	MI 611-206	Intrinsic Safety Connector Diagrams and Nonincendive Circuits
870IT	0595	MI 611-213	Conversion Kit Kit-C-BS806ZP to Add Rain Door Assembly
870ITCR	0398	DP 611-163	Dimensional Print
870ITCR	0699	MI 611-216	Contact Conductivity/Resistivity
870ITCR	1002	PL 611-153	Parts List - Style B
870ITCR	1002	PL 611-156	Parts List - Style A
870ITCR	0998	PSS 6-3C1 B	Product Specification Sheet
870ITEC	0398	DP 611-163	Dimensional Print
870ITEC	0804	MI 611-212	Electrodeless Conductivity Measurements
870ITEC	1002	PL 611-153	Parts List - Style B
870ITEC	1002	PL 611-156	Parts List - Style A
870ITEC	1000	PSS 6-3N2 A	Product Specification Sheet
870ITPH	0398	DP 611-163	Dimensional Print
870ITPH	0704	MI 611-211	pH, ORP, ION Selective Electrode Measurements
870ITPH	1002	PL 611-153	Parts List - Style B
870ITPH	1002	PL 611-156	Parts List - Style A
870ITPH	0803	PSS 6-1B1 B	Product Specification Sheet

Electrochemical Sensors

pH and ORP Sensors

Product	Date	Doc. Num	Title or Description
BS810FA	1202	MI 611-209	PH10/ORP10 BVI Adapter Kit Replace 871PH Titanium
BS810FB	1202	MI 611-209	PH10/ORP10 BVI Adapter Kit Replace 871PH 316 ss
BS811HZ	1202	MI 611-209	PH10/ORP10 BVI Adapter Kit Replace 871A 316 ss
BS811JC	1202	MI 611-209	PH10/ORP10 BVI Adapter Kit Replace 871A Titanium
ORP10	1103	DP 611-171	Dimensional Print
ORP10	1103	DP 611-172	Dimensional Print - Insertion Assemblies for DolpHin
ORP10	1103	DP 611-173	Dimensional Print - Mounting Accessories for DolpHin
ORP10	0902	MI 611-204	Use of Universal Bushing with DolpHin Sensors (BS810XB and BS810XC)
ORP10	1103	MI 611-205	DolpHin - Installation, Troubleshooting, Maintenance, and Parts List
ORP10	0802	PSS 6-1C3 A	Product Specification Sheet
PH10	1103	DP 611-171	Dimensional Print
PH10	1103	DP 611-172	Dimensional Print - Insertion Assemblies for DolpHin
PH10	1103	DP 611-173	Dimensional Print - Mounting Accessories for DolpHin
PH10	0902	MI 611-204	Use of Universal Bushing with DolpHin Sensors (BS810XB and BS810XC)
PH10	1103	MI 611-205	DolpHin - Installation, Troubleshooting, Maintenance, and Parts List
PH10	0802	PSS 6-1C3 A	Product Specification Sheet
871	0201	MI 611-206	Intrinsic Safety Connector Diagrams and Nonincendive Circuits
871A	1092	DP 611-141	Dimensional Print ECS Flow Through Submersible
871A	0188	DP 611-144	Dimensional Print
871A	1195	DP 611-145	Dimensional Print
871A	1092	DP 611-157	Dimensional Print Ball Valve Assembly
871A	1097	MI 611-164	Installation
871A	0104	MI 611-208	Safety Information
871A	0896	PSS 6-1C2 B	Product Specification Sheet
871PH	0804	DP 611-113	Dimensional Print pH and ORP
871PH	0389	DP 611-121	Dimensional Print Mounting Assembly
871PH	0804	DP 611-122	Dimensional Print Ball Valve Assembly
871PH	0283	DP 611-123	Dimensional Print Optional Containment
871PH	0383	DP 611-140	Dimensional Print ECS Flow Through Spool
871PH	1092	DP 611-141	Dimensional Print ECS Flow Through Submersible
871PH	0493	MI 611-125	Electrode Cleaning System
871PH	0804	MI 611-136	Reference Junction Refill Kit for Sensors
871PH	0197	MI 611-148	Installation and Maintenance
871PH	0104	MI 611-208	Safety Information
871PH	0804	MI 611-188	Electrode Kit for Sensors
871PH	0595	PL 611-014	Parts List
871PH	0896	PSS 6-1C2 A	Product Specification Sheet

Electrochemical Sensors

Conductivity Page 1 of 2

Product	Date	Doc. Num	Title or Description
871CC	0686	DP 611-091	Dimensional Print Flow Chambers
871CC	0390	DP 611-092	Dimensional Print Flanges 316 ss
871CC	0683	DP 611-093	Dimensional Print Twist-Lock Bushing 316 ss
871CC	0683	DP 611-094	Dimensional Print Twist-Lock Bushing PVC
871CC	0187	DP 611-105	Dimensional Print Universal Mtg Bushing
871CC	0788	DP 611-131	Dimensional Print 3/4 NPT Thread
871CC	0582	DP 611-132	Dimensional Print Universal MTD
871CC	0788	DP 611-133	Dimensional Print Sanitary Flange
871CC	0788	DP 611-134	Dimensional Print Insertion Type
871CC	0788	DP 611-135	Dimensional Print Twist-Lock MTD
871CC	0788	DP 611-136	Dimensional Print 3/4 NPT or 1/2 NPT
871CC	0788	DP 611-139	Dimensional Print DIP Type (-G)
871CC	0797	MI 611-151	Installation and Maintenance
871CC	0697	PSS 6-3C2 A	Product Specification Sheet
871CR	0998	DP 611-165	Dimensional Print Universal Bore Piece
871CR	0998	DP 611-166	Dimensional Print Bushing Mounted
871CR	0998	DP 611-167	Dimensional Print Universal Bore Piece w/Cable Connector or Conduit Fitting
871CR	0998	DP 611-168	Dimensional Print Tri-Clamp Fittings
871CR	0998	DP 611-169	Dimensional Print Insertion Sensors for use with Ball Valve Accessories
871CR	0799	DP 611-170	Dimensional Print Accessories
871CR	1098	MI 611-221	Sensors and Accessories
871CR	0799	PL 611-019	Parts List Sensors
871CR	0898	PSS 6-3C2 B	Product Specification Sheet
871EC	0192	DP 611-011	Dimensional Print
871EC	0390	DP 611-092	Dimensional Print Flanges 316 ss
871EC	0187	DP 611-105	Dimensional Print Universal Mtg Bushing
871EC	0291	DP 611-142	Dimensional Print Ball Valve Assembly
871EC	0187	DP 611-155	Dimensional Print Ball Valve Assembly
871EC	0785	DP 611-156	Dimensional Print Ball Valve Assembly
871EC	0901	MI 611-150	Installation and Maintenance
871EC	0303	MI 611-220	System Calibration Examples
871EC	1000	PSS 6-3C4 A	Product Specification Sheet
871FT	1098	DP 611-150	Dimensional Print with ANSI Class
871FT	1098	DP 611-151	Dimensional Print with NPT
871FT	0797	DP 611-152	Dimensional Print with Sanitary
871FT	0301	DP 611-153	Dimensional Print with ANSI Class 300
871FT	0797	DP 611-158	Dimensional Print with Metric PN10
871FT	1296	DP 611-159	Dimensional Print with Metric PN16

September 2004

Electrochemical Sensors

Conductivity Page 2 of 2

Product	Date	Doc. Num	Title or Description
871FT	0502	MI 611-202	Installation, Calibration, and Troubleshooting
871FT	0303	MI 611-220	System Calibration Examples
871FT	0301	PL 611-017	Parts List Inch Line Sizes
871FT	0301	PL 611-018	Parts List Millimetre Line Sizes
871FT	0201	PSS 6-3Q1 A	Product Specification Sheet

September 2004

Electrochemical Sensors

Other

Product	Date	Doc. Num	Title or Description
	0504	MI 000-004	Master Book 123 Table of Contents
	0504	MI 000-005	Master Book 123 Index by Model
	0104	PSS 6-0A0 A	Analytical Products Manual 012 Table of Contents
222	0804	DP 611-122	Dimensional Print Ball Valve Assembly
222	0804	DP 611-137	Dimensional Print pH and ORP
871DO	1195	DP 611-149	Dimensional Print
871DO	0401	MI 611-200	Sensors and Accessories
871DO-C	0401	PSS 6-9B1 A	Product Specification Sheet
BS807BZ	0902	DP 611-160	Dimensional Print - Junction Box
BS811MR	0804	DP 611-174	Dimensional Print - Remote Preamplifier Junction Box
EP459A	0701	MI 611-210	Flouride Measuring System

Electrochemical Product Application Data

Product	Date	Doc. Num	Title or Description
	0998	PAD D3620-012	Point of Use Water Purity Measurements in Semiconductor Industry Using Intelligent Transmitters and Sensors
	0198	PAD G2600-006	Black Liquor Spill Reclamation
	0198	PAD G2600-015	Alkali Concentration Measurement System
	0198	PAD G2600-017	Bleaching
	0198	PAD G2600-018	Brownstock Washing
	0198	PAD G2600-019	Causticizing Control
	0198	PAD G2600-020	Steam Condensate Reclamation
	0198	PAD G2600-021	Dissolving Tank Density Control
	0198	PAD G2600-022	Paper Machine - Wet End pH Control
	0198	PAD G2600-023	Waste Water Treatment
	0198	PAD G2600-024	White Liquor Strength
	0298	PAD P4100-020	Intelligent Analytical Transmitters in Power Plant Applications
	0499	PAD P4100-021	Steam Condensate Leak Detection
	0499	PAD P4100-022	Reverse Osmosis Measurements
	0499	PAD P4100-023	pH Measurement in Wet Scrubbers
	0499	PAD P4100-024	pH Measurement in High Purity Boiler Water
	0499	PAD P4100-025	Demineralizer Regeneration Concentration Control
	0499	PAD P4100-026	Demineralization Bed Monitoring
	0499	PAD P4100-027	Cooling Tower Control
	0499	PAD P4100-028	Condensate Return
	0499	PAD P4100-029	Condensate Analysis
	0499	PAD P4100-030	Waste Water Treatment

September 2004

Foxboro Eckardt Electronic Transmitters



Product	Date	Doc. Num	Title or Description
104..	0696	PSS EML0900A-(en)	Product Specification Sheet Accessories for Buoyancy Transmitter
144LD	0400	MI EML0610A-(en)	Buoyancy Transmitter with Torque Tube
144LD	0503	PSS EML0610A-(en)	Product Specification Sheet
144LVD	0400	MI EML1610A-(en)	Buoyancy Transmitter for Liquid Level, Interface and Density
144LVD	1103	PSS EML1610A-(en)	Product Specification Sheet

September 2004

Foxboro Eckardt Positioners



Product	Date	Doc. Num	Title or Description
SRD960	0202	MI EVE0109A-(en)	Universal Positioner
SRD960	1102	PSS EVE0109A-(en)	Product Specification Sheet
SRD991	0499	MI EVE0105A-(en)	Intelligent Positioner
SRD991	0101	PSS EVE0105A-(en)	Product Specification Sheet
SRD992	0899	MI EVE0106A-(en)	Digital Positioner
SRD992	0101	PSS EVE0106A-(en)	Product Specification Sheet
SRI990	0799	MI EVE0107A-(en)	Analog Positioner
SRI990	0101	PSS EVE0107A-(en)	Product Specification Sheet

Magnetic Flow Transmitters

Product	Date	Doc. Num	Title or Description
47	0900	PSS 1-6G1 A	Product Specification Sheet
48	0604	MI 021-329	Supplemental Installation Instructions for Transmitter used in PMO, HTST Flowmeter Applications
48	0900	PSS 1-6G1 A	Product Specification Sheet
IMT25	0501	DP 021-365	Dimensional Print
IMT25	0996	MI 021-388	Integral Keypad and Display, Local Operation, Configuration, and Calibration
IMT25	0998	MI 021-389	With Hand-Held Terminal
IMT25	0402	MI 021-390	Integral Keypad and Display, Local Operation, Configuration, and Calibration with Version 2 Software Configuration
IMT25	0698	MI 021-397	With HART
IMT25	0402	MI 021-398	HART, Integral Keypad and Display, Local Operation, Configuration, and Calibration with Version 2 Software Configuration
IMT25	0501	PL 008-745	Parts List
IMT25	0401	PSS 1-6F5 A	Product Specification Sheet
IMT25-...D	0804	MI 021-387	Installation with 8000, 8000A, 2800, 8300, 9100A, 9200A, and 9300A
IMT25-...D	0901	MI 021-391	System Maintenance with 8000, 8000A, 2800, 8300, and 9300A
IMT25-...F	1001	MI 021-399	Operation, Configuration, and Calibration from a Fieldbus Host and Local Keypad/Display
IMT25-...F	0804	MI 021-400	Installation with 8000, 8000A, 2800, 8300, 9100A, 9200A, and 9300A
IMT25-...F	0901	MI 021-401	Maintenance
IMT25-...F	0501	PSS 1-6F5 B	Product Specification Sheet
IMT25-...T	0804	MI 021-387	Installation with 8000, 8000A, 2800, 8300, 9100A, 9200A, and 9300A
IMT25-...T	0901	MI 021-391	System Maintenance with 8000, 8000A, 2800, 8300, and 9300A
IMT25L	0398	DP 021-366	Dimensional Print
IMT25L	1197	MI 021-393	Installation
IMT25L	1197	MI 021-394	Configuration and Calibration w/PC10
IMT25L	1197	MI 021-395	Maintenance
IMT25L	1197	PL 008-746	Parts List
IMT25L	0398	PSS 1-6F6 A	Product Specification Sheet
IMT96	0299	DP 021-367	Dimensional Print
IMT96	1299	MI 021-402	With 2800 Series Flanged Flowtubes Installation
IMT96	0499	MI 021-403	Integral Keypad and Display, Local Operation, Configuration, and Calibration
IMT96	0499	MI 021-404	With 2800 Series Flanged Flowtubes System Maintenance
IMT96	0599	MI 021-412	Retrofitting 2800 Series with Flanged Flowtubes when Previously Connected to an E96
IMT96	0399	PL 008-747	Parts List
IMT96	1199	PSS 1-6F8 A	Product Specification Sheet

Magnetic Flow Flowtubes

Page 1 of 2

Product	Date	Doc. Num	Title or Description
2800	0193	DP 021-137	Dimensional Print
2800	0100	MI 021-120	Flowtubes, Installation
2800	0100	MI 021-137	Installation
2800	1195	MI 021-138	Fault Location Guide
2800	0100	MI 021-141	Sanitary pftc Line
2800	1103	MI 021-151	Sealing Kits D0128GY (Flanged End) and D0155VA (Wafer End)
2800	0193	PL 008-544	Parts List
2800	0399	PSS 1-6B5 A	Product Specification Sheet
2800	0399	PSS 1-6B5 C	Product Specification Sheet
2800	0902	PSS 1-6B5 E	Product Specification Sheet
4700S	0500	MI 021-321	Electromagnetic Sanitary Flowtubes M/47 and M/48 Series Transmitters
4700S	0400	MI 021-322	Electromagnetic Sanitary Flowtubes - Quick Start
4700S	0400	MI 021-323	Electromagnetic Sizes DN 10 - 100 Installation
4700S	0104	MI 021-324	Flowmeter Sensor Data PROM Installation
4700S	0104	MI 021-326	Flowmeter Wall Mounting Kit Installation Part Number 085B0050
4700S	0604	MI 021-329	Supplemental Installation Instructions for Flowtube used in PMO, HTST Flowmeter Applications
4700S	1002	PSS 1-6G2 A	Product Specification Sheet
8000A	0903	DP 021-358	Dimensional Print
8000A	0704	MI 019-179	Flow Safety Information
8000A	1103	MI 021-151	Sealing Kits D0128GY (Flanged End) and D0155VA (Wafer End)
8000A	1297	MI 021-380	Installation
8000A	0198	PL 008-740	Parts List
8000A	0903	PSS 1-6F2 A	Product Specification Sheet
8000A	1193	PSS 1-6F2 C	Product Specification Sheet
8300	0892	DP 021-360	Dimensional Print Flanged
8300	0892	DP 021-361	Dimensional Print pftc-Lined Sanitary
8300	1103	MI 021-151	Sealing Kits D0128GY (Flanged End) and D0155VA (Wafer End)
8300	0196	MI 021-381	Installation
8300	0194	PL 008-741	Parts List
8300	0698	PSS 1-6F2 B	Product Specification Sheet
8300	1193	PSS 1-6F2 C	Product Specification Sheet
9100A	0401	DP 021-368	Dimensional Print Flanged
9100A	0704	MI 019-179	Flow Safety Information
9100A	0501	MI 021-413	Flowtubes, Installation
9100A	0601	PL 008-748	Parts List
9100A	0902	PSS 1-6F9 A	Product Specification Sheet

September 2004

Magnetic Flow Flowtubes

Page 2 of 2

Product	Date	Doc. Num	Title or Description
9200A	0401	DP 021-368	Dimensional Print Flanged
9200A	0704	MI 019-179	Flow Safety Information
9200A	0501	MI 021-413	Flowtubes, Installation
9200A	0601	PL 008-748	Parts List
9200A	0902	PSS 1-6F10A	Product Specification Sheet
9300A	0902	DP 021-364	Dimensional Print
9300A	1103	MI 019-179	Flow Safety Information
9300A	1103	MI 021-151	Sealing Kits D0128GY (Flanged End) and D0155VA (Wafer End)
9300A	0801	MI 021-386	pfa, pft, Poly, Installation
9300A	1199	PL 008-742	Parts List
9300A	0902	PSS 1-6F4 A	Product Specification Sheet

September 2004

Magnetic Flow Other

Product	Date	Doc. Num	Title or Description
	0497	TI 27-71f	Technical Information Material Selection Guide
IMTSIM	1197	MI 021-392	Magnetic Flowtube Simulator
IMTSIM	0997	PSS 1-6F7 A	Product Specification Sheet

September 2004

Mass Flow Transmitter



Product	Date	Doc. Num	Title or Description
CFT10	0297	MI 019-121	Installation and Maintenance
CFT10	1199	MI 019-122	Configuration and Operation Using Integral Keypad
CFT10	0796	MI 019-123	Operation, Calibration, and Configuration Using HHT L0122EV
CFT10	0302	PSS 1-2B3 C	Product Specification Sheet
CFT10	0300	TI 001-053	Tutorial Percent Solids Calculation
CFT10-P	0391	DP 019-360	Dimensional Print Panel Mounting
CFT10-P	0302	PL 008-700	Parts List
CFT10-Q	0290	DP 019-361	Dimensional Print Field Mounting
CFT10-Q	0302	PL 008-701	Parts List
CFT10-S	0302	PL 008-701	Parts List
CFT10-X	1294	DP 019-364	Dimensional Print
CFT10-X	0302	PL 008-701	Parts List
CFT15	0297	MI 019-127	Installation and Maintenance
CFT15	0798	MI 019-128	Operation Using Integral Keypad
CFT15	0698	MI 019-131	Modbus Protocol Communication Interface
CFT15	0302	PSS 1-2B3 D	Product Specification Sheet
CFT15	0300	TI 001-053	Tutorial Percent Solids Calculation
CFT15-P	0302	PL 008-731	Parts List
CFT15-Q	0302	PL 008-719	Parts List
CFT15-S	0302	PL 008-719	Parts List
CFT15-X	0302	PL 008-719	Parts List
CFT50	1203	MI 019-100	Universal Instruction Manual I/A Series Mass Flow Products
CFT50	0504	DP 019-375	Dimensional Print
CFT50	0204	MI 019-132	Digital Coriolis Transmitter with HART - Installation, Startup, Configuration, and Maintenance
CFT50	0304	MI 019-133	Intrinsic Safety Connection Diagrams
CFT50	0704	MI 019-179	Flow Safety Information
CFT50	0204	PL 008-704	Parts List
CFT50	0404	PSS 1-2B7 A	Product Specification Sheet

September 2004

Mass Flow Flowtubes

Product	Date	Doc. Num	Title or Description
CFS10	0802	DP 019-182	Dimensional Print 6-50 mm (1/4 to 2 inch)
CFS10	0998	DP 019-366	Dimensional Print 3 mm (1/8 inch)
CFS10	1203	MI 019-100	Universal Instruction Manual I/A Series Mass Flow Products
CFS10	0204	MI 019-120	Installation, Startup, Troubleshooting and Maintenance
CFS10	0704	MI 019-179	Flow Safety Information
CFS10	0203	PL 008-702	Parts List - Style A
CFS10	1203	PL 008-733	Parts List - Style B
CFS10	0204	PSS 1-2B1 A	Product Specification Sheet
CFS20	0802	DP 019-183	Dimensional Print
CFS20	1203	MI 019-100	Universal Instruction Manual I/A Series Mass Flow Products
CFS20	0204	MI 019-120	Installation, Startup, Troubleshooting and Maintenance
CFS20	0704	MI 019-179	Flow Safety Information
CFS20	0203	PL 008-703	Parts List - Style A
CFS20	1203	PL 008-735	Parts List - Style B
CFS20	0204	PSS 1-2B1 A	Product Specification Sheet

Product	Date	Doc. Num	Title or Description
	0803	MSDS 010	Recorders - Type 1800 Aqueous Recorder Ink
	1103	MSDS 021	Controllers - Nitrogen - N2 Liquefied Nitrogen N2 (Cryogenic)
	1103	MSDS 022	Controllers - Argon - Ar Liquefied Argon - Ar (Cryogenic)
	1103	MSDS 023	Controllers - Helium - He Liquefied Helium - He (Cryogenic)
0003093	0602	MSDS 049	Echem Sensors - Reference Electrode Solution - 4M Potassium Chloride Solution Plus Glycol
0045317	0204	MSDS 047	Controllers - Eastmand DBP Plasticizer
0045726	0204	MSDS 047	Controllers - Eastmand DBP Plasticizer
0046719	1103	MSDS 019	Controllers - Toluene
0048130	1003	MSDS 092	Pressure Transmitters - DC111 Valve Lubricant and Sealant
0048860	0604	MSDS 099	Controllers - 4205 Prism Instant Adhesive Thermal Reistant Gel
1355061	0602	MSDS 051	Echem Sensors - Antimony pH Electrode Disk
1600585	1202	MSDS 140	Echem Sensors - Nyogel 761
A072203	0604	MSDS 032	Pressure Transmitters - DC704 Diffusion Pump Fluid Silicone
AS600AM	0602	MSDS 050	Echem Sensors - Glass pH Electrode Buffer Solution
B0134LM	1003	MSDS 031	Pressure Transmitters - DC200 Fluid 2 CST and 5 CST
B0139SL	0503	MSDS 029	Pressure Transmitters - FC-77 Fluorinert Brand Electronic Liquid
B0158LY	0602	MSDS 049	Echem Sensors - Reference Electrode Solution - 4M Potassium Chloride Solution Plus Glycol
BS806MU	0602	MSDS 106	Echem Sensors - Fluoride Electrolyte - 1 Liter
BS810YB	1003	MSDS 136	Echem Sensors - Internal Filling Solution
BS811GH	0802	MSDS 139	Echem Sensors - Reference Electrode Solution - 1M Potassium Chloride Solution Plus Glycol
C1000VY	1003	MSDS 103	Pressure Transmitters - DC200 Fluid 10 CST
D0114YC	1003	MSDS 034	Pressure Transmitters - DC200 Fluid, 500 CST - Silicone
D0116MP	1103	MSDS 043	Controllers - Ethylene Glycol
F0109EH	0804	MSDS 120	Controllers - Moebius Oil Syntalube
N1206TZ	0404	MSDS 142	Pressure Seals - Neobee M-20
Q0104KE	1103	MSDS 053	Echem Sensors - 4 Molar Potassium Chloride Saturated with Silver Chloride
T0103KR	1103	MSDS 015	Controllers - Propane - C3H8
T0103KT	1103	MSDS 017	Controllers - Propane - C3H8
T0103PX	1003	MSDS 020	Controllers - Acetone
X0114AF	0299	MSDS 127	Pressure Transmitters - Key Abso-Lute (Oxygen Sealing Compound)
X0118CC	0702	MSDS 088	Pressure Transmitters - Lubriplate Aero
X0180AM	0602	MSDS 125	Pressure Transmitters - FC-43 Fluorinert Brand Electronic Liquid
X0180DE	1003	MSDS 126	Pressure Transmitters - DC200 Fluid 5 CST
X0180HB	1003	MSDS 137	Echem Analyzers - DC838 Silicone Adhesive/Sealant
X0180HK	1203	MSDS 141	Magnetic Flow Flowtubes - DC3-4207 Dielectric Tough Gel Part A and B

Pressure Transmitters d/p Cell

Page 1 of 2

Product	Date	Doc. Num	Title or Description
	0998	B0800AE	Ensuring Premium Performance with Foxboro Intelligent Level Transmitters
	0100	B0800AG	Pressure Transmitters - Getting Started
11DM	0304	PL 006-265	Parts List Styles C and D
13A	0499	MI 022-310	d/p Cell Installation and Operation
13A	0789	MI 022-345	Maintenance
13A	0304	PL 006-175	Parts List
13A	0101	PSS 2B-1C1 A	Product Specification Sheet
13H	0304	PL 006-177	Parts List
13H	0101	PSS 2B-1C1 A	Product Specification Sheet
15A	0304	PL 006-176	Parts List Styles B-E
15A	0101	PSS 2B-1C1 A	Product Specification Sheet
CO	1003	DP 022-335	Dimensional Print
CO	1003	MI 022-335	Compact Orifice with d/p Cell Transmitters
CO	1003	PL 006-172	Parts List - Compact Orifice with d/p Cell Transmitters
CO	1003	PSS 3-5A1 E	Product Specification Sheet - Compact Orifice with d/p Cell Transmitters
IDP10	1103	DP 020-446	Dimensional Print
IDP10	1003	MI 020-358	Safety Information
IDP10	0903	MI 020-359	Universal Instruction Manual
IDP10	0604	MI 020-427	Pressure Transmitters Intrinsic Safety
IDP10	0204	PL 009-005	Parts List
IDP10	0903	PSS 2A-1Z9 E	Product Specification Sheet Options
IDP10-A	0404	MI IDP10-A	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA Not Intrinsically Safe)
IDP10-A	0503	PSS 2A-1C14 C	Product Specification Sheet
IDP10-D	0404	MI IDP10-D	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IDP10-D	0303	PSS 2A-1C14 A	Product Specification Sheet
IDP10-F	0404	MI IDP10-F	Transmitters w/Foundation Fieldbus - Installation, Calibration, Configuration (Fieldbus Foundation)
IDP10-F	0301	MI 020-368	Transmitters w/Foundation Fieldbus - Intrinsic Safety Connection Diagram
IDP10-F	0603	PSS 2A-1C13 E	Product Specification Sheet
IDP10-P	0404	MI IDP10-P	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA HART)
IDP10-P	1103	PSS 2A-1C13 J	Product Specification Sheet
IDP10-T	1203	MI 020-366	I/A Series Pressure Transmitters with HART M275 Configurator
IDP10-T	0404	MI IDP10-T	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA HART)
IDP10-T	0503	PSS 2A-1C14 B	Product Specification Sheet
IDP10-V	0404	MI IDP10-V	Installation, Calibration, Configuration, and Maintenance (1 to 5 V Low Power)
IDP10-V	0603	PSS 2A-1C13 D	Product Specification Sheet

Pressure Transmitters d/p Cell

Page 2 of 2

Product	Date	Doc. Num	Title or Description
IDP25	1103	DP 020-446	Dimensional Print
IDP25	1003	MI 020-358	Safety Information
IDP25	0903	MI 020-359	Universal Instruction Manual
IDP25	0604	MI 020-427	Pressure Transmitters Intrinsic Safety
IDP25	0303	PL 009-013	Parts List
IDP25	0903	PSS 2A-1Z9 E	Product Specification Sheet Options
IDP25-D	0404	MI IDP25-D/ IDP50-D	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IDP25-D	0703	PSS 2A-1C14 K	Product Specification Sheet
IDP25-F	0301	MI 020-368	Transmitters w/Foundation Fieldbus - Intrinsic Safety Connection Diagram
IDP25-F	0404	MI IDP25-F/ IDP50-F	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IDP25-F	0703	PSS 2A-1C14 K	Product Specification Sheet
IDP25T	1203	MI 020-366	I/A Series Pressure Transmitters with HART M275 Configurator
IDP25-T	0404	MI IDP25-T/ IDP50-T	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IDP25-T	0703	PSS 2A-1C14 K	Product Specification Sheet
IDP50	1103	DP 020-446	Dimensional Print
IDP50	1003	MI 020-358	Safety Information
IDP50	0903	MI 020-359	Universal Instruction Manual
IDP50	0604	MI 020-427	Pressure Transmitters Intrinsic Safety
IDP50	0303	PL 009-014	Parts List
IDP50	0903	PSS 2A-1Z9 E	Product Specification Sheet Options
IDP50-D	0404	MI IDP25-D/ IDP50-D	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IDP50-D	1103	PSS 2A-1C14 L	Product Specification Sheet
IDP50-F	0301	MI 020-368	Transmitters w/Foundation Fieldbus - Intrinsic Safety Connection Diagram
IDP50-F	0404	MI IDP25-F/ IDP50-F	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IDP50-F	1103	PSS 2A-1C14 L	Product Specification Sheet
IDP50-T	1203	MI 020-366	I/A Series Pressure Transmitters with HART M275 Configurator
IDP50-T	0404	MI IDP25-T/ IDP50-T	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IDP50-T	1103	PSS 2A-1C14 L	Product Specification Sheet

Pressure Transmitters

Absolute/Gauge

Page 1 of 5

Product	Date	Doc. Num	Title or Description
	0998	B0800AE	Ensuring Premium Performance with Foxboro Intelligent Level Transmitters
	0100	B0800AG	Pressure Transmitters - Getting Started
11A	0701	PSS 2B-1A1 A	Product Specification Sheet
11AH	0304	PL 006-273	Parts List Styles C and D
11AL	0304	PL 006-272	Parts List Styles C and D
11AM	0304	PL 006-271	Parts List Styles D and E
11GH	0304	PL 006-267	Parts List Styles D and E
11GH	0999	PSS 2B-1A3 A	Product Specification Sheet
11GM	0499	MI 004-311	Removable Sealed Pressure
11GM	0499	MI 022-415	Pressure Transmitter Style C-D
11GM	0304	PL 006-266	Parts List
11GM	0999	PSS 2B-1A3 A	Product Specification Sheet
15F	0103	PL 006-179	Parts List
IAP10	0599	DP 020-212	Dimensional Print Sanitary Gauge or Absolute Level 2-inch Tri-Clamp
IAP10	0403	DP 020-217	Dimensional Print Sanitary with Pulp and Paper Process Connections
IAP10	0403	DP 020-218	Dimensional Print Sanitary with 1 1/2-, 2-, 3-inch Tri-Clamp
IAP10	0403	DP 020-219	Dimensional Print Sanitary with Mini Tank Spud Seal
IAP10	1001	DP 020-447	Dimensional Print
IAP10	1003	MI 020-358	Safety Information
IAP10	0903	MI 020-359	Universal Instruction Manual
IAP10	0604	MI 020-427	Pressure Transmitters Intrinsic Safety
IAP10	0204	PL 009-006	Parts List
IAP10	1103	PSS 2A-1C13 K	Product Specification Sheet - Sanitary Process Connections
IAP10	1103	PSS 2A-1C13 L	Product Specification Sheet - Process Connections for Pulp and Paper
IAP10	0903	PSS 2A-1Z9 E	Product Specification Sheet Options
IAP10-A	0404	MI IAP10-A/ IGP10-A	Installation, Calibration, Configuration, and Maintenance (3 to 20 mA Not Intrinsically Safe)
IAP10-A	0603	PSS 2A-1C13 C	Product Specification Sheet
IAP10-D	0404	MI IAP10-D/ IGP10-D	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IAP10-D	0700	MI 020-476	I/A Series Pressure Transmitters (-D) Using HHT Pak L0122EV
IAP10-D	0603	PSS 2A-1C13 A	Product Specification Sheet
IAP10-F	0404	MI IAP10-F/ IGP10-F	Installation, Calibration, Configuration, and Maintenance (Foundation)
IAP10-F	0301	MI 020-368	Transmitters w/Foundation Fieldbus - Intrinsic Safety Connection Diagram
IAP10-F	0603	PSS 2A-1C13 E	Product Specification Sheet
IAP10-P	0404	MI IAP10-P/ IGP10-P	Installation, Calibration, Configuration, and Maintenance (Profibus)
IAP10-P	1103	PSS 2A-1C13 J	Product Specification Sheet
IAP10-T	1203	MI 020-366	I/A Series Pressure Transmitters with HART M275 Configurator
IAP10-T	0404	MI IAP10-T/ IGP10-T	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA HART)

Pressure Transmitters

Absolute/Gauge

Page 2 of 5

Product	Date	Doc. Num	Title or Description
IAP10-T	0603	PSS 2A-1C13 B	Product Specification Sheet
IAP10-V	0404	MI IAP10-V/ IGP10-V	Installation, Calibration, Configuration, and Maintenance (1 to 5 V Low Power)
IAP10-V	0603	PSS 2A-1C13 D	Product Specification Sheet
IAP20	0403	DP 020-217	Dimensional Print Sanitary with Pulp and Paper Process Connections
IAP20	0403	DP 020-218	Dimensional Print Sanitary with 1 1/2-, 2-, 3-inch Tri-Clamp
IAP20	0403	DP 020-219	Dimensional Print Sanitary with Mini Tank Spud Seal
IAP20	1001	DP 020-447	Dimensional Print
IAP20	1003	MI 020-358	Safety Information
IAP20	0903	MI 020-359	Universal Instruction Manual
IAP20	0604	MI 020-427	Pressure Transmitters Intrinsic Safety
IAP20	0204	PL 009-007	Parts List
IAP20	0903	PSS 2A-1Z9 E	Product Specification Sheet Options
IAP20-A	0404	MI IAP20-A/ IGP20-A	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA Not Intrinsically Safe)
IAP20-A	0603	PSS 2A-1C13 C	Product Specification Sheet
IAP20-D	0404	MI IAP20-D/ IGP20-D	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IAP20-D	0700	MI 020-476	I/A Series Pressure Transmitters (-D) Using HHT Pak L0122EV
IAP20-D	0603	PSS 2A-1C13 A	Product Specification Sheet
IAP20-F	0404	MI IAP20-F/ IGP20-F	Installation, Calibration, Configuration, and Maintenance (Fieldbus Foundation)
IAP20-F	0301	MI 020-368	Transmitters w/Foundation Fieldbus - Intrinsic Safety Connection Diagram
IAP20-F	0603	PSS 2A-1C13 E	Product Specification Sheet
IAP20-P	0404	MI IAP20-P/ IGP20-P	Installation, Calibration, Configuration, and Maintenance (Profibus)
IAP20-P	1103	PSS 2A-1C13 J	Product Specification Sheet
IAP20-T	1203	MI 020-366	I/A Series Pressure Transmitters with HART M275 Configurator
IAP20-T	0404	MI IAP20-T/ IGP20-T	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA HART)
IAP20-T	0202	PSS 2A-1C13 B	Product Specification Sheet
IAP20-V	0404	MI IAP20-V/ IGP20-V	Installation, Calibration, Configuration, and Maintenance (1 to 5 V Low Power)
IAP20-V	0603	PSS 2A-1C13 D	Product Specification Sheet
IGP10	0599	DP 020-211	Dimensional Print Sanitary Gauge Pressure/Level 1 1/2-inch Tri-Clamp
IGP10	0599	DP 020-212	Dimensional Print Sanitary Gauge or Absolute Level 2-inch Tri-Clamp
IGP10	0599	DP 020-213	Dimensional Print Sanitary Gauge Pressure/Level 3-inch Tri-Clamp
IGP10	0599	DP 020-214	Dimensional Print Sanitary Gauge Pressure/Level Mini Tank Spud
IGP10	0599	DP 020-216	Dimensional Print Sanitary Gauge Pressure/Level Extended Mini Tank Spud

Pressure Transmitters

Absolute/Gauge

Page 3 of 5

Product	Date	Doc. Num	Title or Description
IGP10	0403	DP 020-217	Dimensional Print Sanitary with Pulp and Paper Process Connections
IGP10	0403	DP 020-218	Dimensional Print Sanitary with 1 1/2-, 2-, 3-inch Tri-Clamp
IGP10	0403	DP 020-219	Dimensional Print Sanitary with Mini Tank Spud Seal
IGP10	0400	DP 020-344	Dimensional Print High Gauge
IGP10	1001	DP 020-447	Dimensional Print
IGP10	1003	MI 020-358	Safety Information
IGP10	0903	MI 020-359	Universal Instruction Manual
IGP10	0604	MI 020-427	Pressure Transmitters Intrinsic Safety
IGP10	0204	PL 009-006	Parts List
IGP10	0204	PL 009-010	Parts List
IGP10	1103	PSS 2A-1C13 F	Product Specification Sheet - for High Gauge
IGP10	1103	PSS 2A-1C13 K	Product Specification Sheet - Sanitary Process Connections
IGP10	1103	PSS 2A-1C13 L	Product Specification Sheet - Process Connections for Pulp and Paper
IGP10	0903	PSS 2A-1Z9 E	Product Specification Sheet Options
IGP10-A	0404	MI IAP10-A/ IGP10-A	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA Not Intrinsically Safe)
IGP10-A	0603	PSS 2A-1C13 C	Product Specification Sheet
IGP10-D	0404	MI IAP10-D/ IGP10-D	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IGP10-D	0700	MI 020-476	I/A Series Pressure Transmitters (-D) Using HHT Pak L0122EV
IGP10-D	0603	PSS 2A-1C13 A	Product Specification Sheet
IGP10-F	0404	MI IAP10-F/ IGP10-F	Installation, Calibration, Configuration, and Maintenance (Fieldbus Foundation)
IGP10-F	0301	MI 020-368	Transmitters w/Foundation Fieldbus - Intrinsic Safety Connection Diagram
IGP10-F	0603	PSS 2A-1C13 E	Product Specification Sheet
IGP10-P	0404	MI IAP10-P/ IGP10-P	Installation, Calibration, Configuration, and Maintenance (Profibus)
IGP10-P	1103	PSS 2A-1C13 J	Product Specification Sheet
IGP10-T	1203	MI 020-366	I/A Series Pressure Transmitters with HART M275 Configurator
IGP10-T	0404	MI IAP10-T/ IGP10-T	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA HART)
IGP10-T	0603	PSS 2A-1C13 B	Product Specification Sheet
IGP10-V	0404	MI IAP10-V/ IGP10-V	Installation, Calibration, Configuration, and Maintenance (1 to 5 V Low Power)
IGP10-V	0603	PSS 2A-1C13 D	Product Specification Sheet
IGP20	0599	DP 020-211	Dimensional Print Sanitary Gauge Pressure/Level 1 1/2-inch Tri-Clamp
IGP20	0599	DP 020-212	Dimensional Print Sanitary Gauge or Absolute Pressure/Level 2-inch Tri-Clamp
IGP20	0599	DP 020-213	Dimensional Print Sanitary Gauge Pressure/Level 3-inch Tri-Clamp
IGP20	0599	DP 020-214	Dimensional Print Sanitary Gauge Pressure/Level Mini Tank Spud
IGP20	0599	DP 020-216	Dimensional Print Sanitary Gauge Pressure/Level Extended Mini Tank Spud

Pressure Transmitters

Absolute/Gauge

Page 4 of 5

Product	Date	Doc. Num	Title or Description
IGP20	0403	DP 020-217	Dimensional Print Sanitary with Pulp and Paper Process Connections
IGP20	0403	DP 020-218	Dimensional Print Sanitary with 1 1/2-, 2-, 3-inch Tri-Clamp
IGP20	0403	DP 020-219	Dimensional Print Sanitary with Mini Tank Spud Seal
IGP20	1001	DP 020-447	Dimensional Print
IGP20	1003	MI 020-358	Safety Information
IGP20	0903	MI 020-359	Universal Instruction Manual
IGP20	0604	MI 020-427	Pressure Transmitters Intrinsic Safety
IGP20	0204	PL 009-007	Parts List
IGP20	0903	PSS 2A-1Z9 E	Product Specification Sheet Options
IGP20-A	0404	MI IAP20-A/ IGP20-A	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA Not Intrinsically Safe)
IGP20-A	0603	PSS 2A-1C13 C	Product Specification Sheet
IGP20-D	0404	MI IAP20-D/ IGP20-D	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IGP20-D	0700	MI 020-476	I/A Series Pressure Transmitters (-D) Using HHT Pak L0122EV
IGP20-D	0603	PSS 2A-1C13 A	Product Specification Sheet
IGP20-F	0404	MI IAP20-F/ IGP20-F	Installation, Calibration, Configuration, and Maintenance (Fieldbus Foundation)
IGP20-F	0301	MI 020-368	Transmitters w/Foundation Fieldbus - Intrinsic Safety Connection Diagram
IGP20-F	0603	PSS 2A-1C13 E	Product Specification Sheet
IGP20-P	0404	MI IAP20-P/ IGP20-P	Installation, Calibration, Configuration, and Maintenance (Profibus)
IGP20-P	1103	PSS 2A-1C13 J	Product Specification Sheet
IGP20-T	1203	MI 020-366	I/A Series Pressure Transmitters with HART M275 Configurator
IGP20-T	0404	MI IAP20-T/ IGP20-T	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA HART)
IGP20-T	0603	PSS 2A-1C13 B	Product Specification Sheet
IGP20-V	0404	MI IAP20-V/ IGP20-V	Installation, Calibration, Configuration, and Maintenance (1 to 5 V Low Power)
IGP20-V	0603	PSS 2A-1C13 D	Product Specification Sheet
IGP25	1001	DP 020-447	Dimensional Print
IGP25	1003	MI 020-358	Safety Information
IGP25	0903	MI 020-359	Universal Instruction Manual
IGP25	0604	MI 020-427	Pressure Transmitters Intrinsic Safety
IGP25	0903	PL 009-011	Parts List
IGP25	0903	PSS 2A-1Z9 E	Product Specification Sheet Options
IGP25-D	0404	MI IGP25-D/ IGP50-D	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IGP25-D	0700	MI 020-476	I/A Series Pressure Transmitters (-D) Using HHT Pak L0122EV
IGP25-D	0703	PSS 2A-1C13 G	Product Specification Sheet
IGP25-D	1003	PSS 2A-1C13 M	Product Specification Sheet - with Sanitary Process Connections
IGP25-D	0803	PSS 2A-1C13 N	Product Specification Sheet - with Pulp and Paper Process Connections

Pressure Transmitters

Absolute/Gauge

Page 5 of 5

Product	Date	Doc. Num	Title or Description
IGP25-F	0404	MI IGP25-F/ IGP50-F	Installation, Calibration, Configuration, and Maintenance (Fieldbus Foundation)
IGP25-F	0301	MI 020-368	Transmitters w/Foundation Fieldbus - Intrinsic Safety Connection Diagram
IGP25-F	0703	PSS 2A-1C13 G	Product Specification Sheet
IGP25-F	1003	PSS 2A-1C13 M	Product Specification Sheet - with Sanitary Process Connections
IGP25-F	0803	PSS 2A-1C13 N	Product Specification Sheet - with Pulp and Paper Process Connections
IGP25-T	0404	MI IGP25-T/ IGP50-T	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IGP25-T	1203	MI 020-366	I/A Series Pressure Transmitters with HART M275 Configurator
IGP25-T	0703	PSS 2A-1C13 G	Product Specification Sheet
IGP25-T	1003	PSS 2A-1C13 M	Product Specification Sheet - with Sanitary Process Connections
IGP25-T	0803	PSS 2A-1C13 N	Product Specification Sheet - with Pulp and Paper Process Connections
IGP50	1001	DP 020-447	Dimensional Print
IGP50	1003	MI 020-358	Safety Information
IGP50	0903	MI 020-359	Universal Instruction Manual
IGP50	0604	MI 020-427	Pressure Transmitters Intrinsic Safety
IGP50	0303	PL 009-012	Parts List
IGP50	0903	PSS 2A-1Z9 E	Product Specification Sheet Options
IGP50-D	0404	MI IGP25-D/ IGP50-D	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IGP50-D	0700	MI 020-476	I/A Series Pressure Transmitters (-D) Using HHT Pak L0122EV
IGP50-D	0803	PSS 2A-1C13 H	Product Specification Sheet
IGP50-F	0404	MI IGP25-F/ IGP50-F	Installation, Calibration, Configuration, and Maintenance (Fieldbus Foundation)
IGP50-F	0301	MI 020-368	Transmitters w/Foundation Fieldbus - Intrinsic Safety Connection Diagram
IGP50-F	0803	PSS 2A-1C13 H	Product Specification Sheet
IGP50-T	0404	MI IGP25-T/ IGP50-T	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IGP50-T	1203	MI 020-366	I/A Series Pressure Transmitters with HART M275 Configurator
IGP50-T	0700	MI 020-476	I/A Series Pressure Transmitters (-D) Using HHT Pak L0122EV
IGP50-T	0803	PSS 2A-1C13 H	Product Specification Sheet

Pressure Transmitters

Pressure Seals

Product	Date	Doc. Num	Title or Description
PSFAD	1101	DP 020-346	Dimensional Print
PSFAD	0903	MI 020-369	Pressure Seals for Use With I/A Series Pressure Transmitters
PSFAD	0403	PSS 2A-1Z11 A	Product Specification Sheet
PSFAR	1101	DP 020-345	Dimensional Print
PSFAR	0903	MI 020-369	Pressure Seals for Use With I/A Series Pressure Transmitters
PSFAR	0403	PSS 2A-1Z11 A	Product Specification Sheet
PSFES	1101	DP 020-343	Dimensional Print
PSFES	0903	MI 020-369	Pressure Seals for Use With I/A Series Pressure Transmitters
PSFES	0403	PSS 2A-1Z11 A	Product Specification Sheet
PSFLT	1101	DP 020-342	Dimensional Print
PSFLT	0903	MI 020-369	Pressure Seals for Use With I/A Series Pressure Transmitters
PSFLT	0403	PSS 2A-1Z11 A	Product Specification Sheet
PSFPS	1101	DP 020-343	Dimensional Print
PSFPS	0903	MI 020-369	Pressure Seals for Use With I/A Series Pressure Transmitters
PSFPS	0403	PSS 2A-1Z11 A	Product Specification Sheet
PSISD	1101	DP 020-350	Dimensional Print
PSISD	0903	MI 020-369	Pressure Seals for Use With I/A Series Pressure Transmitters
PSISD	0403	PSS 2A-1Z11 A	Product Specification Sheet
PSISR	1101	DP 020-349	Dimensional Print
PSISR	0903	MI 020-369	Pressure Seals for Use With I/A Series Pressure Transmitters
PSISR	0403	PSS 2A-1Z11 A	Product Specification Sheet
PSSCR	1101	DP 020-351	Dimensional Print
PSSCR	0903	MI 020-369	Pressure Seals for Use With I/A Series Pressure Transmitters
PSSCR	0403	PSS 2A-1Z11 A	Product Specification Sheet
PSSCT	0403	DP 020-355	Dimensional Print
PSSCT	0903	MI 020-369	Pressure Seals for Use With I/A Series Pressure Transmitters
PSSCT	0403	PSS 2A-1Z11 A	Product Specification Sheet
PSSSR	0403	DP 020-353	Dimensional Print
PSSSR	0903	MI 020-369	Pressure Seals for Use With I/A Series Pressure Transmitters
PSSSR	0403	PSS 2A-1Z11 A	Product Specification Sheet
PSSST	0403	DP 020-354	Dimensional Print
PSSST	0903	MI 020-369	Pressure Seals for Use With I/A Series Pressure Transmitters
PSSST	0403	PSS 2A-1Z11 A	Product Specification Sheet
PSTAD	1101	DP 020-348	Dimensional Print
PSTAD	0903	MI 020-369	Pressure Seals for Use With I/A Series Pressure Transmitters
PSTAD	0403	PSS 2A-1Z11 A	Product Specification Sheet
PSTAR	1101	DP 020-347	Dimensional Print
PSTAR	0903	MI 020-369	Pressure Seals for Use With I/A Series Pressure Transmitters
PSTAR	0403	PSS 2A-1Z11 A	Product Specification Sheet

September 2004

Pressure Transmitters Pneumatic-to-Current Converters

Product	Date	Doc. Num	Title or Description
IPI10-A	1299	DP 020-414	Dimensional Print
IPI10-A	0100	MI 020-414	Installation, Calibration, Configuration, and Maintenance
IPI10-A	0100	PL 009-144	Parts List - Pneumatic-to-Current Converter
IPI10-A	0100	PSS 2A-2A4 A	IPI10 Series Pneumatic-to-Current Converter
IPI10-I	1299	DP 020-414	Dimensional Print
IPI10-I	0100	MI 020-414	Installation, Calibration, Configuration, and Maintenance
IPI10-I	0100	PL 009-144	Parts List - Pneumatic-to-Current Converter
IPI10-I	0100	PSS 2A-2A4 A	IPI10 Series Pneumatic-to-Current Converter

Pressure Transmitters Multivariable

Product	Date	Doc. Num	Title or Description
IMV25	1103	DP 020-432	Dimensional Print
IMV25	1003	MI 020-358	Safety Information
IMV25	0903	PL 009-019	Parts List
IMV25	0903	PSS 2A-1Z9 E	Product Specification Sheet Options
IMV25-D	0602	MI 020-432	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IMV25-D	0204	PSS 2A-1C15 B	Product Specification Sheet
IMV25-F	0204	PSS 2A-1C15 B	Product Specification Sheet
IMV25-T	0702	MI 020-382	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA HART)
IMV25-T	0204	PSS 2A-1C15 B	Product Specification Sheet
IMV30	1103	DP 020-432	Dimensional Print
IMV30	1003	MI 020-358	Safety Information
IMV30	0303	PL 009-018	Parts List
IMV30	0903	PSS 2A-1Z9 E	Product Specification Sheet Options
IMV30-D	0602	MI 020-432	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA FoxCom)
IMV30-D	0204	PSS 2A-1C15 A	Product Specification Sheet
IMV30-T	0702	MI 020-382	Installation, Calibration, Configuration, and Maintenance (4 to 20 mA HART)
IMV30-T	0204	PSS 2A-1C15 A	Product Specification Sheet

September 2004

Pressure Transmitters

Other



Product	Date	Doc. Num	Title or Description
	0988	MI 020-328	Bubble Tube Installation for Measurement
	0997	MI 020-350	Wiring Guidelines for All Intelligent Devices
	0799	MI 020-360	Wiring Guidelines for Foundation Fieldbus Transmitters
	0190	MI 022-137	3-Valve and 5-Valve Bypass Manifolds
	0501	PSS 3-2A1 A	Product Specification Sheet Pressure and Receiver Elements
	1299	PSS 3-2C1 A	Product Specification Sheet Pressure Seals
	0497	TI 037-096	I/A Series Intelligent Pressure Transmitters
	1186	TI 37-75b	Technical Information Material Selection Guide
13DEMP	0103	PL 006-180	Parts List - Transmitter with Matched Extended Pressure Seals
13DMP	0103	PL 006-180	Parts List - Transmitter with Matched Pressure Seals
13F	0103	PL 006-178	Parts List - Liquid Level or Density Styles C and D
13FE	0103	PL 006-178	Parts List - Liquid Level or Density Styles E and F
D0170MB thru MJ	0598	MI 020-412	Mounting Hardware Kits to Replace 823DP, 843DP and 863DP with IDP10
HHT	0197	MI 020-400	Pocket Guide with I/A Series Pressure Transmitters
MH	1002	PL 002-101	Pressure Gauges - Parts List

September 2004

Remote Configurators



Product	Date	Doc. Num	Title or Description
	0801	B0193XX	Field Device Integration Checklist
275	1097	MI 020-484	HART M275 Communicator Messages
PC20	1102	MI 020-495	Intelligent Field Device Configurator
PC20	1102	PL 009-156	Parts List
PC20	1102	PSS 2A-1Z3 E	Product Specification Sheet
PC50	1003	MI 020-501	Field Device Tool - Installation and Parts List
PC50	1003	MI 020-504	Field Device Tool - Operation Using FoxCom Communication Protocol
PC50	1003	MI 020-505	Field Device Tool - Operation Using HART Communication Protocol
PC50	0803	PSS 2A-1Z3 F	Product Specification Sheet
PCMV	0903	MI 020-496	Intelligent Field Device Configurator for IMV25 and IMV30 Multivariable Transmitters
PCMV	0502	PL 009-157	Parts List
PCMV	0502	PSS 2A-1Z3 F	Product Specification Sheet

Product	Date	Doc. Num	Title or Description
12A	0201	PSS 2B-1B1 A	Product Specification Sheet
RTT15	0304	DP 020-462	Dimensional Print
RTT15	0304	MI 020-449	Intrinsic Safety Connection Diagrams
RTT15-F	0104	PL 008-662	Parts List
RTT15-F	0304	MI 020-462	Temperature Transmitter with FOUNDATION Fieldbus Protocol
RTT15-F	0104	PSS 2A-1F5 A	Product Specification Sheet
RTT15P	0304	MI 020-462	Temperature Transmitter with Profibus Protocol
RTT15-P	0104	PL 008-662	Parts List
RTT15-P	0104	PSS 2A-1F5 A	Product Specification Sheet
RTT15T	0304	MI 020-463	Temperature Transmitter with HART Protocol
RTT15-T	0104	PL 008-662	Parts List
RTT15-T	0104	PSS 2A-1F5 A	Product Specification Sheet
RTT20	0399	DP 020-460	Dimensional Print
RTT20	0499	MI 020-453	Installation, Calibration, Configuration, and Maintenance
RTT20	0399	MI 020-454	Intrinsic Safety
RTT20	1096	MI 020-460	Operation, Configuration, and Calibration using HART M275 Configurator
RTT20	0596	MI 020-461	Configuration Menu Flowchart for 1-Line LCD Indicator
RTT20	0398	MI 020-469	Operation, Calibration, and Configuration Using HHT
RTT20	0399	PL 008-659	Parts List
RTT20	0701	PSS 2A-1F4 A	Product Specification Sheet
RTT20	0701	PSS 2A-1Z9 F	Product Specification Sheet Options
RTT25	0600	DP 020-461	Dimensional Print
RTT25	0800	PL 008-661	Parts List
RTT25	0701	PSS 2A-1Z9 F	Production Specification Sheet
RTT25-F	0403	MI 020-488	Installation, Calibration, Local/Remote Configuration and Maintenance
RTT25-F	0403	PSS 2A-1F4 C	Product Specification Sheet

Product	Date	Doc. Num	Title or Description
83	0395	MI 019-191	Amplifier Replacement for Conventional and Intelligent Vortex Flowmeters
83	0704	MI 019-179	Flow Safety Information
83	0403	MI 019-188	Conversion from Analog, FoxCom, or HART to FOUNDATION Fieldbus - Kit Numbers K0147VN and K0148VN
83.-D	1000	MI 019-175	Intrinsic Safety Connection Diagrams
83.-F	0301	MI 019-176	FOUNDATION Fieldbus Intrinsic Safety Diagrams
83.-T	1000	MI 019-175	Intrinsic Safety Connection Diagrams
83F	0400	DP 019-150	Dimensional Print for Single Measurement Configuration
83F	0400	DP 019-151	Dimensional Print for Dual Measurement Configuration
83F	1103	MI 019-145	Universal Instruction Manual - Installation and Startup
83F	0297	MI 019-197	Convert Integral to Remote
83F-A	0596	MI 019-152	European Installations
83F-A	0398	MI 019-189	Installation, Troubleshooting, and Maintenance
83F-A	0700	PL 008-708	Parts List
83F-A	1296	PSS 1-8A1 D	Product Specification Sheet
83F-D	0496	MI 019-153	European Installations
83F-D	0297	MI 019-194	Installation, Configuration, Troubleshooting, and Maintenance
83F-D	1299	MI 019-198	Addition of Digital Display and Configuration
83F-D	0700	PL 008-708	Parts List
83F-D	1296	PSS 1-8A1 E	Product Specification Sheet
83F-F	0701	MI 019-193	Flowmeters with FOUNDATION Fieldbus
83F-F	0700	PL 008-708	Parts List
83F-F	0900	PSS 1-8A1F	Product Specification Sheet
83F-T	0397	MI 019-154	European Installations
83F-T	0297	MI 019-199	Installation, Configuration, Troubleshooting, and Maintenance
83F-T	0700	PL 008-708	Parts List
83F-T	1296	PSS 1-8A1 E	Product Specification Sheet
83S	0197	DP 019-154	Dimensional Print Sanitary
83S	1103	MI 019-145	Universal Instruction Manual - Installation and Startup
83S-A	0301	MI 019-173	Sanitary Installation, Troubleshooting, and Maintenance
83S-A	0297	PL 008-713	Parts List
83S-A	0497	PSS 1-8A2 E	Product Specification Sheet
83S-D	0297	MI 019-195	Sanitary
83S-D	1299	MI 019-198	Addition of Digital Display and Configuration
83S-D	0297	PL 008-713	Parts List
83S-D	1296	PSS 1-8A2 D	Product Specification Sheet
83S-T	0597	MI 019-174	Sanitary Installation, Troubleshooting, and Maintenance
83S-T	0297	PL 008-713	Parts List
83S-T	1296	PSS 1-8A2 D	Product Specification Sheet

Product	Date	Doc. Num	Title or Description
83W	0702	DP 019-152	Dimensional Print Wafer Body
83W	1103	MI 019-145	Universal Instruction Manual - Installation and Startup
83W	0297	MI 019-197	Convert Integral to Remote
83W-A	0596	MI 019-152	European Installations
83W-A	0398	MI 019-189	Installation, Troubleshooting, and Maintenance
83W-A	0700	PL 008-709	Parts List
83W-A	1296	PSS 1-8A1 D	Product Specification Sheet
83W-D	0496	MI 019-153	European Installations
83W-D	0297	MI 019-194	Installation, Configuration, Troubleshooting, and Maintenance
83W-D	1299	MI 019-198	Addition of Digital Display and Configuration
83W-D	0700	PL 008-709	Parts List
83W-D	1296	PSS 1-8A1 E	Product Specification Sheet
83W-F	0701	MI 019-193	Flowmeters with FOUNDATION Fieldbus
83W-F	0700	PL 008-709	Parts List
83W-F	0900	PSS 1-8A1F	Product Specification Sheet
83W-T	0397	MI 019-154	European Installations
83W-T	0700	PL 008-709	Parts List
83W-T	1296	PSS 1-8A1 E	Product Specification Sheet
E83	0395	MI 019-191	Amplifier Replacement for Conventional and Intelligent Vortex Flowmeters
E83F	0398	MI 019-166	Sensor/Amplifier Replacement
E83FA	0398	MI 019-189	Installation, Troubleshooting, and Maintenance
E83FA	0297	MI 019-196	Convert to 83F-D, 83S-D, or 83W-D Style A
E83L	0398	MI 019-166	Sensor/Amplifier Replacement
E83SA	0297	MI 019-196	Convert to 83F-D, 83S-D, or 83W-D Style A
E83W	0398	MI 019-166	Sensor/Amplifier Replacement
E83WA	0398	MI 019-189	Installation, Troubleshooting, and Maintenance
E83WA	0297	MI 019-196	Convert to 83F-D, 83S-D, or 83W-D Style A

September 2004

Other Totalizer and Flow Computer

Product	Date	Doc. Num	Title or Description
75LBA	1193	DP 019-543	Dimensional Print
75LBA	0298	MI 019-589	Pulse Input Liquid Batch Totalizer
75LBA	0398	MI 019-590	Analog Input Liquid Batch Totalizer
75LBA	1193	PL 008-727	Parts List
75LBA	1093	PSS 1-9C1 A	Product Specification Sheet
75MCA	0794	DP 019-542	Dimensional Print
75MCA	0398	MI 019-591	Pulse Input Liquid Mass Computer
75MCA	0498	MI 019-592	Analog Input Liquid Mass Computer
75MCA	0598	MI 019-594	Pulse Input Gas/Steam Mass Computer
75MCA	0598	MI 019-595	Analog Input Gas/Steam Mass Computer
75MCA	0794	PL 008-728	Parts List
75MCA	0397	PSS 1-9D1 A	Product Specification Sheet
75RTA	0794	DP 019-542	Dimensional Print
75RTA	0298	MI 019-587	Pulse Input Ratemeter Totalizer
75RTA	0298	MI 019-588	Analog Input Ratemeter Totalizer
75RTA	0393	PSS 1-9B1 A	Product Specification Sheet

Other Positioners and I/P Converters

Product	Date	Doc. Num	Title or Description
E69F	0703	MI 018-429	Current-to-Pneumatic Converter - Safety Inforamtion
E69F	1095	MI 018-430	Current-to-Pneumatic Converter - Field Mounted
E69F	0603	PL 008-645	Parts List
E69F	0304	PSS 2B-2A3 B	Product Specification Sheet
E69P	0703	MI 018-429	Current-to-Pneumatic Valve Positiner - Safety Inforamtion
E69P	0185	MI 018-440	Current-to-Pneumatic Valve Positioner
E69P	0802	PL 008-647	Parts List
E69P	0903	PSS 4-10A2 A	Product Specification Sheet
E69R	0802	PL 008-646	Parts List
E69R	1001	PSS 2B-2A2 A	Product Specification Sheet
P91PA	0504	PL 005-365	Parts List - Poweractor
P91T	0802	DP 014-132	Dimensional Print
P91T	0802	MI 014-132	Type CP Pneumatic Position Transmitter
P91T	0802	PL 006-320	Parts List
P91T	0104	PSS 2B-1B1 B	Product Specification Sheet
P91V	0802	DP 012-340	Dimensional Print
P91V	0802	MI 012-340	Type C Vernier VALVACTOR - Yoke Mounted
P91V	0802	PL 005-320	Parts List

Other Miscellaneous

Product	Date	Doc. Num	Title or Description
	0104	DP 000-001	Dimensional Print Manual 190 Table of Contents
	0104	DP 000-002	Dimensional print Manual 190 Index by Model
	0504	MI 000-001	Master Book 100 Table of Contents
	0504	MI 000-002	Master Book 100 Index by Model
	0504	MI 001-001	FoxDoc Documentaiton Listing
	0902	MI 014-101	Sulfur Detection Using Lead Acetate Test Paper
	0304	PL 000-001	Master Book 150 Table of Contents
	0304	PL 000-002	Master Book 150 Index by Model
	0903	PL 001-110	Chart Drives - Parts List
	0104	PSS 0-0A0 A	Product Specification Manual 010 Table of Contents
	0104	PSS 0-0A0 B	Product Specification Manual 010 Index by Model
	1001	TI 037-094	Quality Assurance Certificates for Non-Nuclear Parts and Products
CO	1003	PL 006-172	Parts List - Compact Orifice with d/p Cell Transmitters
CO	1003	PSS 3-5A1 E	Product Specification Sheet - Compact Orifice with d/p Cell Transmitters
IFOA	1002	PSS 3-5A1 B	Integral Flow Orifice Assembly used with d/p Cell Transmitter
MAC	0802	PL 005-356	Air Cylinders - Parts List
PF100AX	1003	MI 018-180	75 V dc Multiloop Power Supply
P0300CQ	1003	MI 018-180	75 V dc Multiloop Power Supply
17BS	0203	PL 006-318	Side Mounted Buoyancy Transmitter - Parts List
17BT	0203	PL 006-318	Top Mounted Buoyancy Transmitter - Parts List
39A	0702	DP 001-148	Dimensional Print
39A	0502	PSS 7-3C3 A	Flow Recorder
556	0304	PL 006-345	Pneumatic Analog Computer - Parts List
557	0304	PL 006-346	Pneumatic Square Root Extractor - Parts List